



Miaomiaoce Thermo-hygrometer- Product Instruction

Product Introduction

Thank you for choosing our product. It is a room thermal-hygrometer, which is equipped with advanced digital sensor to rapidly and accurately measure the temperature and humidity. Along with the change of temperature and humidity, the figure on screen shall be changed accordingly to remind us to adjust ourselves to the environment and cultivate healthy lifestyle.

Product specification

Product name: Miaomiaoce Thermo-hygrometer

Product model: MHO-C201

Product Standard: Q/WSDJ2401-2017

Product Material: ABS+PC PMMA

Product size: 64.5 × 64.5 × 9.7mm

Net weight: 36g

Working voltage: DC3V-2.4V

Battery type: CR2032


Scope of temperature measurement: 0 - +60° C

Precision of temperature measurement: ± 0.3° C

Scope of humidity measurement: 0-100%

Precision of humidity measurement: ± 3%RH

Screen display information

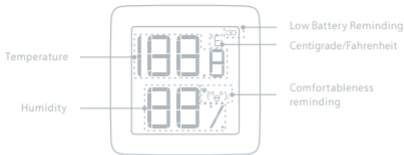







Screen refreshing

In order to improve screen display quality and eliminate ghost displaying, the product will refresh the whole screen when the displayed frequencies are around 30 times (the screen shall be completely white for a moment and display the value afterwards); then, it shall display the value and expressional symbol again, based on latest measurement result.

Comfortableness reminding

Set corresponding facial expression reminding based on environmental temperature and humidity change.

Temperature \ Humidity	$T < 20^{\circ}$	$20^{\circ} \leq T \leq 27^{\circ}$	$T > 27^{\circ}$
$H < 25\%$			* 
$25\% \leq H \leq 75\%$			
$H > 75\%$			* 

Low power reminding

When below icon shows on the right corner of the screen, it means the battery is running out. Please charge the battery soon.




Low power reminding

Instructions:

How to Install the Battery

Take out the insulator under the battery before using:

When the battery runs out, please install a CR2032 battery in the battery box and make sure the negative electrode face downwards:

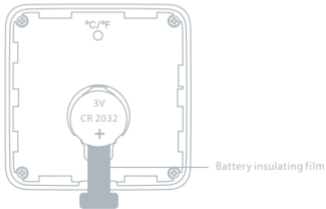

How to Install the Product

It can be installed inside the house in following steps when it is working smoothly:

1. Install the product into the holder accessory and put it on the table, TV cabinet or other objectives;



Thermo-hygrometer

Holder

2. Stick the double-sided tapes at the pasting area on the back of product; then stick the product on the wall inside the room;



Thermo-hygrometer

Double-sided tape

3. Stick soft magnet at the pasting area on the back of product; then stick the product on refrigerator or other magnetic absorbable surfaces of the product;



Thermo-hygrometer




Soft magnet



How to Switch the Centigrade/Fahrenheit Measurement

In standby mode, take off the back cover, then you will see the "Centigrade/Fahrenheit switching button" on the back of the main part; press it with a pointy object for 3 seconds to switch Centigrade/Fahrenheit.

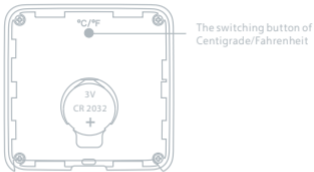

Notices

1. Keep it away from high temperature and humidity environment or other harsh environments;
2. Wipe off the dust or besmirch on the product with soft cloth and neutral detergent;
3. It is a product for improving a healthy life, which cannot be used as measurement instrument;

Instructions and Maintenance of Miaomiaoce Thermo-hygrometer

Guarantee Ordinances:

The product after-sales service of Miaomiaoce Thermo-hygrometer is strictly based on *Consumer Rights and Interests Protection Law of the People's Republic of China* and *Law on Product Quality of the People's Republic of China*. The service content is listed below:

1. 7 days since the receiving of the product, any product defect listed on Sheet of Product Performance Failure, you will get refund or changing service for free after getting the product inspected and determined by Miaomiaoce Thermo-hygrometer after-sale service center;
2. From 8 to 15 days since the receiving of the product, any product defect listed in Sheet of Product Performance Failure, you will be guaranteed with changing or maintenance service for free after getting the product inspected and determined by Miaomiaoce Thermo-hygrometer after-sale service center;
3. Within 12 months since the receiving of the product, any product defect listed in Sheet of Product Performance Failure, you will be guaranteed with maintenance service for free after getting the product inspected and determined by Miaomiaoce Thermo-hygrometer after-sale service center;

Non-Guarantee Ordinances:

1. Unauthorized maintenance, misuse, collision, ignorance, abuse, accident, changes; incorrect appliance of non-product accessory; or broken anti-demolition label;
2. Products which exceeded valid term of "three guarantees"
3. Loss caused by force majeure;
4. Inconformity of performance failure listed in Sheet of Product Performance Failure;
5. Performance failure of thermo-hygrometer or its accessories listed in Sheet of Product Performance Failure caused by man-induced factors;

Sheet of Product Performance Failure

Product Name	Performance Failure
Miaomiaoce Thermo-hygrometer	1. Exterior damages caused by structural or material reason
	2. Invalid button
	3. Cannot display the value on the screen or chaotic display.

Content of harmful component:

Product Part Name	Harmful Component					
	Pb (Pb)	Hg (Hg)	Cd (Cd)	Cr6 (Cr(VI))	PBB (PBB)	PBDE (PBDE)
Circuit unit	X	○	○	○	○	○
Battery box	○	○	○	○	○	○
Shell	○	○	○	○	○	○
Small piece of component material	○	○	○	○	○	○

The table is compiled based on regulations in SJ/T 11364.

○: means the content of harmful component in the materials is below regulated requirement in GB/T 26572.

X: means the content of harmful component in at least one of the material exceeds regulated requirement in GB/T 26572.





Connected with our official WeChat
for intimate service

Service hotline: 400-902-8288

Manufacturer: Miaomiaoce Medical Equipment (Tianjin) Co., Ltd.

Address: No.26, Xiqi Avenue, Tianjin Free Trade Test Zone (Airport Economic Zone)
Plant ZX102, F1, Zhixin Medical Valley, Tianjin Dongruan Software Park

Refer to our website for related information: www.miaomiaoce.com